

item code	description	information
0004	null	instrument panel /
1032	null	electrical supplies protection and management unit
6202	null	front left-hand door lock assembly
6207	null	front right-hand door lock assembly
6212	null	rear left-hand door lock assembly
6217	null	rear right-hand door lock assembly
6222	null	boot lock assembly
6265	null	fuel filler flap lock motor
6282	null	boot opening switch
8480	null	radio telephone transmitter-receiver
84C8	null	null
BB00	null	battery /
BSI1	null	built-in systems interface
CV00	null	steering wheel controls
E622	null	crimp one information (or equipotential 622) wire
E623	null	crimp one information (or equipotential 623) wire
E624	null	crimp one information (or equipotential 624) wire
E907	null	crimp one information (or equipotential 907) wire
E908	null	crimp one information (or equipotential 908) wire
E912A	null	crimp one information (or equipotential 912) wire
E912B	null	crimp one information (or equipotential 912) wire
E913A	null	crimp one information (or equipotential 913) wire
E913B	null	crimp one information (or equipotential 913) wire
E934A	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM10A	null	crimp earth (earth point number 10A)
EM11A	null	crimp earth (earth point number 11A)
EM46D	null	crimp earth (earth point number 46D)
EM47B	null	crimp earth (earth point number 47B)
EM47E	null	crimp earth (earth point number 47E)
EM51A	null	crimp earth (earth point number 51A)
EM51B	null	crimp earth (earth point number 51B)
EM53	null	crimp earth (earth point number 53)
EM55A	null	crimp earth (earth point number 55A)
EM60	null	crimp earth (earth point number 60)
EM62	null	crimp earth (earth point number 62)
EM63B	null	crimp earth (earth point number 63B)
EM65	null	crimp earth (earth point number 65)
EM67	null	crimp earth (earth point number 67)
EZ21	null	splicing of a CAN + protected by fuse number N21
MC10A	null	body earth point number 10A
MC11A	null	body earth point number 11A
MC13	null	body earth point number 13
MC46A	null	body earth point number 46
MC46D	null	body earth point number 46
MC47	null	body earth point number 47
MC47A	null	body earth point number 47
MC47D	null	body earth point number 47
MC51A	null	body earth point number 51
MC51B	null	body earth point number 51
MC53	null	body earth point number 53
MC55A	null	body earth point number 55
MC63C	null	body earth point number 63
MM01	null	engine earth point number 01
PSF1	null	engine compartment fusebox panel